

| No. | Clasif. | Descripción | No. | Clas. | Description |
|---------------|----------|-----------------------------------|---------------|----------|------------------------------------|
| 1 | Rf-546 | Tapón para Llave de Retención | 1 | Rf-546 | Stopper For Stop Valve |
| 2 | Rf-042 | Tuerca Superior Llave | 2 | Rf-042 | Stop Body Cap |
| 3 | Rf-041 | Tornillo Elevador Llave Ret. | 3 | Rf-041 | Stop Body Screw |
| 4 | Rf-040 | Guía Delrin Embolo | 4 | Rf-040 | Delrin Piston Guide |
| 5 | Rh-220 | O'ring 2-115 | 5 | Rh-220 | O'ring 2-115 |
| 6 | Rf-250 | Embolo Llave Retención | 6 | Rf-250 | Delrin Piston |
| 7 | Rf-234 | Resorte Embolo Llave Reten. | 7 | Rf-234 | Piston Spring |
| 8 | Rf-256 | Inserto Embolo y Asiento Tope | 8 | Rf-256 | Seat Stop And Piston Insert |
| 9 | Rf-038 | Cuerpo Llave Retención 1 | 9 | Rf-038 | Stop Body Housing |
| 10 | Rf-035 | O'ring 2-123 | 10 | Rf-035 | O'ring 2-123 |
| 11 | Rf-036 | Anillo Presión Niple Extensión | 11 | Rf-036 | Pressure Ring For Tail Piece |
| 12 | Rf-037 | Tuerca Cople Llave Retención | 12 | Rf-037 | Stop Body Nut |
| 13 | Sf-116 | Cuerpo Principal Con Niple Cr | 13 | Sf-116 | Main Body With Tail Piece |
| 14 | Rf-317 | Cúpula Ciega Fluxómetro Nuevo | 14 | Rf-317 | Flux Cover |
| 15 | Rf-016 | Rondana Neopreno Cúpula Flux. | 15 | Rf-016 | Neoprene Cover Washer |
| 16 | Rf-015 | Tornillo No.8-32Nc X 1/2 | 16 | Rf-015 | Brass Screw Spindle Piston |
| 17 | Rf-295 | Rondana de Latón 6 Lts. | 17 | Rf-295 | Brass Washer Sleeve Armed |
| 18 | Rf-052 | Goma Llantita S-14-A Vulcanizada | 18 | Rf-052 | Double Lip Washer S-14 |
| 19 | Rf-309 | Embolo Macho Del Rin 6 Lts. | 19 | Rf-309 | Spindle Piston Rf-009 |
| 20 | Rf-234 | Resorte Embolo Llave Reten. | 20 | Rf-234 | Piston Spring |
| 21 | Sf-002 | Asiento Con Perno Embolo | 21 | Sf-002 | Piston Nut Seat |
| 22 | Rf-005 | Rondana Hule Embolo Hembra S-20 | 22 | Rf-005 | Rubber Washer For Piston Nut Seat |
| 23 | Rf-003 | Embolo Hembra | 23 | Rf-003 | Piston Nut |
| 24 | Rf-075 | Rondana S-21 Vulcanizada | 24 | Rf-075 | Vulcanized Rubber Washer Sv-21 |
| 25 | Rf-044 | Rondana Hule Tca.F-2 de 32 | 25 | Rf-044 | Rubber Washer For Nut F-2-32 Mm |
| 26 | Rf-045 | Rondana de 32Mm | 26 | Rf-045 | Washer Joint 32 Mm |
| 27 | Rf-063 | Tuerca F2-32 | 27 | Rf-063 | F2-32 Nut |
| 28 | Rf-047 | Niple Recto 32 Mm | 28 | Rf-047 | 32Mm Nipple |
| 29 | Rf-048 | Tuerca Spud 32Mm | 29 | Rf-048 | 32Mm Spud Nut |
| 30 | Rf-049 | Rondana Tuerca Spud 32 | 30 | Rf-049 | Washer Joint 32 Mm |
| 31 | Rf-050 | Rondana Hule Tuerca Spud 32,38 | 31 | Rf-050 | Rubber Was For Nut 32,38 |
| 32 | Rf-024 | Rondana Hule para Manija Flux. | 32 | Rf-024 | Handle Washer |
| 33 | Rf-025 | Empaque Cónico para Estopero | 33 | Rf-025 | Conical Washer |
| 34 | Rf-230 | Cpo. Estopero Con Cda.Flux. | 34 | Rf-230 | Threaded Stopper Body Handle |
| 35 | Rf-030 | Resorte Estopero | 35 | Rf-030 | Stopper Spring |
| 36 | Rf-120 | O'ring para Perno Estopero | 36 | Rf-120 | O'Ring 2-006 |
| 37 | Rf-002 | Perno Asiento Estopero | 37 | Rf-002 | Stopper Handle Seat Bolt |
| 38 | Rf-032 | Tca. Unión Cople Cpo.Principal | 38 | Rf-032 | Flux Body Nut |
| 39 | Rf-090 | Tuerca Plana 1 3/8"-18 Ns | 39 | Rf-090 | 1 3/8"-18 Ns Flat Nut |
| 40 | Sf-011 | Tubo Interior Con Rondana Soldada | 40 | Sf-011 | Internal Tube With Soldered Washer |
| 41 | Rf-107 | Botón Solo para Fluxometro | 41 | Rf-107 | Flux Button |
| 42 | Sf-036 | Niple Muro 20 Cm | 42 | Sf-036 | 20 Cm Wall Nipple |
| 43 | Rf-118 | Base Pedal Fluxómetro | 43 | Rf-118 | Flux Pedal Base |
| 44 | Rf-106 | Prisionero Sin Cabeza Pedal | 44 | Rf-106 | Pedal Set Screw |
| 45 | Rf-105 | Pedal para Fluxómetro | 45 | Rf-105 | Flux Pedal |
| 46 | Rf-247 | Chapetón Grande Spud 32 mm | 46 | Rf-247 | Large Escutcheon 32 Mm |
| 47 | Rf-048-C | Tuerca Spud 32mm | 47 | Rf-048-C | Joint Nut Spud 32 Mm |
| 48 | Rf-070 | Codo de 32 mm | 48 | Rf-070 | 32Mm Elbow |
| Sub-ensamble: | | | Sub-ensamble: | | |
| 49 | Sf-008 | Llave Retención Armada | 49 | Sf-008 | Stop Body Assembly |
| 50 | Sf-015 | Mecanismo Cierre Llave Ret. | 50 | Sf-015 | Stop Body Shutting Mechanism |
| 51 | Sf-105 | Cúpula Ciega Flux. N-54-N | 51 | Sf-105 | N-54-N Flux Cover |
| 52 | Sf-124 | Embolo Armado 6 Litros Ns-60-N | 52 | Sf-124 | 6 Lts. Piston Assembled |
| 53 | Sf-063 | Rondana y Tuerca F-2 32 | 53 | Sf-063 | F-2-32 Nut And Washer |
| 54 | Sf-064 | Rondana y Tuerca Spud 32 | 54 | Sf-064 | 32Mm Nut And Washer |
| 55 | Sf-110 | Estopero Arm. Con Cuerda Flux. | 55 | Sf-110 | Handle Mechanism |
| 56 | Sf-012 | Perno Asiento Estopero Flux.6 | 56 | Sf-012 | Stopper Handle Seat Bolt |
| 57 | Sf-147 | Niple Muro Fluxómetro de Pedal | 57 | Sf-147 | Pedal Flux Wall Nipple |
| 58 | Sf-064-C | Rondana y Tuerca Spud 32 | 58 | Sf-064-C | Washer And Spud 32 Nut Kit |

